

Trouble shooting guide for the Laser Wireless Keyboard and Mouse with USB charger.

As with any piece of computer equipment the Instruction manual should be read before use and the equipment should only be used for the purpose that it is designed for.

Check the contents of the packaging to ensure all components and accessories are included. The box should contain the following

- Laser Wireless Keyboard and wrist rest.
- Laser Wireless Optical mouse.
- 1 set (2) Alkaline (non rechargeable) batteries size AA for keyboard.
- 1 set (2) Ni-MH (rechargeable) batteries size AAA for mouse.
- USB receiver/charger cradle for mouse.
- Instruction manual
- Driver CD-Rom.

Trouble shooting.

Charging the Mouse batteries for the first time.

Please ensure the batteries are charged for approximately 15 hours prior to first use.

The receiver must be plugged into a USB port and the computer must remain on for the charging process.

Connecting the Keyboard and mouse

With the computer on, plug the receiver into a USB Port. The operating System should automatically install drivers for the receiver.

The blue “Connect” button should now be glowing on the receiver.

Press the “Connect” button on the receiver, the blue light should now start flashing slowly.

Press the button on the base of the Keyboard. The connect light on the receiver should flash quickly for approx 5 – 10 seconds and slow down again. The light will continue to flash for approx 30 seconds more.

When the blue light stops flashing, the Keyboard should now be connected to the computer (to test, press the Windows key on the keyboard and the start menu should now appear on the monitor)

The process is the same for connecting the mouse.

Fully charge the mouse batteries. Press the “Connect” button on the receiver until it starts flashing. Press the “Connect” button on the base of the mouse. The “Connect” light should briefly flash quickly and then return to the normal pace.

When the “Connect” light has stopped flashing, place the mouse on the desk and move it slowly, the cursor should be following the movements.

When to change the batteries.

The Wireless Keyboard is fitted with a “Low battery” indicator to let you know when it is time to change the AA batteries. On average a set of batteries should last several months. This may vary depending on use and interference to the receiver from electronics sources in the general area.

If the mouse starts to become erratic and slow to respond, it will be time to place the mouse in the cradle for charging. The mouse should be charged for approximately 5 hours. The computer must remain on for the batteries to be charged in the cradle.

When charging, ensure that the red charge light is displayed. If the light does not come on when the mouse is placed in the cradle, try reseating the mouse until the light is on.

Effective range.

The effective range of the Wireless Keyboard and mouse is approximately 3 to 4 metres. This may vary and will depend on the location of the receiver and interference from electronic sources in the general area.

To help increase the range, locate the receiver as high as possible, away from the monitor and PC case, allowing access for placing the mouse in the cradle for charging.

Drivers

Drivers are only available for the following operating systems. Win98SE, WinME, Win2000 and WinXP.

Basic Keyboard and mouse functions are available without installing the drivers.

The Wireless keyboard and Mouse set is compatible with Mac OS 8.6 and above for basic functions only. No further drivers are available for Mac users at this time.