



QUICK USER GUIDE

PANEL FUNCTION

1. USB/SD Card jack
2. Power On/Off
3. MIC Treble Adjustor
4. MIC Bass Adjustor
5. AUX IN
6. MIC Echo Adjustor
7. MIC Priority
8. GUITAR Volume Adjustor
9. MIC Jack
10. GUITAR Jack
11. MIC Volume Adjustor
12. Main Volume Adjustor
13. USB/SD player control input mode key
14. USB/SD player control repeat key
15. RECORD
16. EQ control
17. USB/SD player control prev key
18. USB/SD play/pause control key
19. USB/SD player control next key

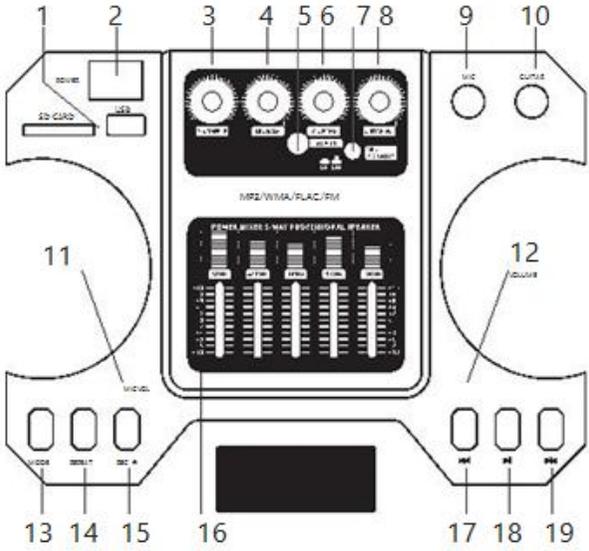

REMOTE CONTROL FUNCTION

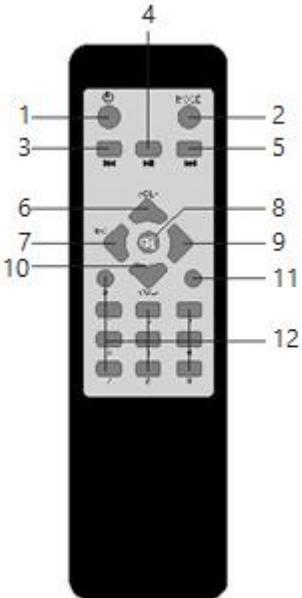

1. Power
2. MODE Input Selector
3. Previous
4. Play/Pause
5. Next
6. Volume Up
7. Sound Equalizer
8. Mute
9. Repeat song
10. Volume Down
11. Scan (Radio Stations)
12. Numerical Keypad

LASER



SPK-F300

● Using a Microphone

1. Plug your microphone into the microphone jack
2. Adjust the volume using the MIC VOL knob
3. Use the ECHO knob to control the microphone echo effect.

● Using a WIRELESS Microphone

Note: Your wireless microphone is designed to work with this speaker only. Your wireless microphone uses 2 x AA batteries.

1. Turn on your wireless Microphone and ensure your speaker is also turned on.
2. Your wireless microphone is now ready to use.

● Playing music via external storage (Micro SD Card / USB Socket)

Note: Only MP3 files are supported by this speaker. Please turn the speaker off before removing any connected external storage.

1. Press MODE on your speaker to select EXTERNAL STORAGE mode or press U/SD on your remote control.
2. Connect your external storage.
4. Use the pause button or previous and next button to select different songs.

● Using Aux (LINE IN 3.5mm)

Note: Please disconnect any external storage or microphones while using AUX mode

1. Press MODE on your speaker or remote control to select LINE IN mode
2. Connect your external audio device via the 3.5mm audio jack socket and begin playback.

● Using Bluetooth

1. Press MODE on your speaker or remote control to select BLUETOOTH mode
2. Turn on the Bluetooth device on your audio device such as smart phone and search for your speaker (model SPK-F300)
3. Pair and connect with your speaker to begin music playback.
4. Unpair your device from your speaker when finished.

● Listening to the FM Radio from the Speaker

1. Press MODE on your speaker or remote control to select FM radio mode

- From the Speaker

- a. Press and hold the PLAY button on your speaker to auto-scan for all radio stations.
- b. Once scanned, press the PREVIOUS and NEXT buttons to move to different stations.


- From the Remote control

- a. Press the SCAN button to auto-scan for all radio stations.
- b. Once scanned, press the PREVIOUS and NEXT buttons to move to different stations.

● Using Guitar Jack.

1. Connect your guitar to your speaker.
2. Use the Guitar volume knob to control the volume.

● The back panel (Diagram)

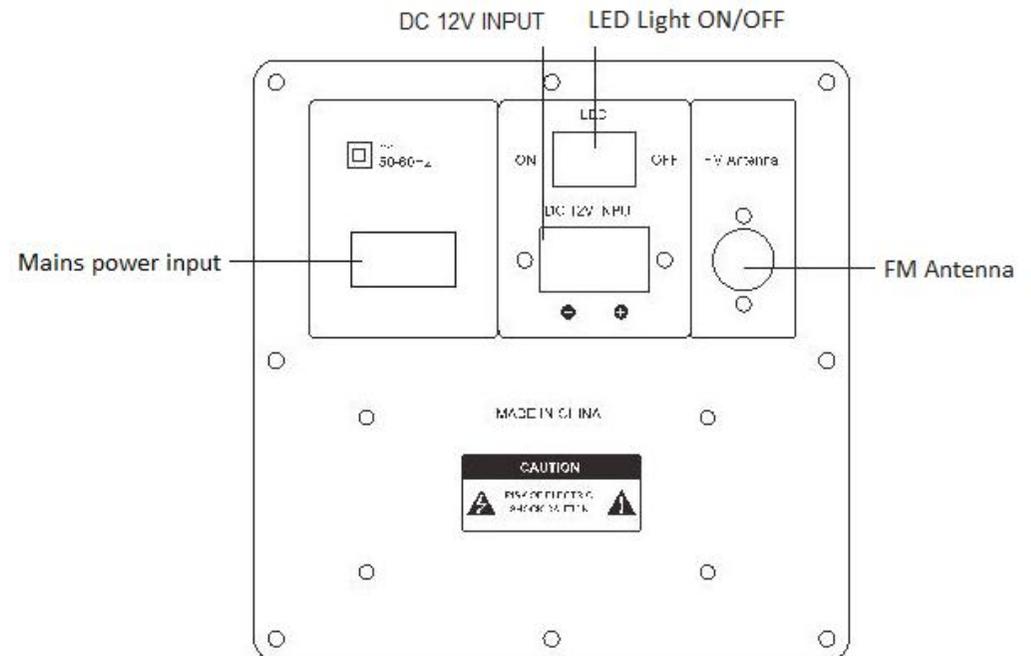

Warranty Against Defects

Laser Corporation Pty Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Through a network of retailers and resellers, Laser will provide you with your choice of a repair, exchange (where possible) or refund (within Dead on Arrival period) for this product if it becomes defective within the warranty period.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage. Please retain your receipt as proof of purchase

How to make a product warranty claim:

Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture, the condition of the Laser Product and the type of defect.

Step 2a): Contact your place of purchase. They will assess the nature of the fault and repair, replace or fund the product as per their store refund or warranty policy.

Step 2b): If your place of purchase cannot be contacted, then you can contact Laser. Customer Service with details of your defective Laser Product: Phone: (02) 9870 3388; or Email: support@laserco.com.au or online www.laserco.com.au/warranty (click on "Consumers (End Users)"). Our business address is at 1/6-8 Byfield Street, North Ryde, NSW 2113

Step 3: Laser will issue you with a Return Authorisation (RA) number within 48 hours. When requested, send us the defective Product and a copy of your receipt. Laser will cover the cost of the return delivery.

Step 4: Wait for us to contact you. Once we have received your defective Laser Product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser Product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser Product.

Step 5: For further details on warranty cover and returns, please check Terms and Conditions for Warranty Returns section on <http://www.laserco.com.au/warranty>

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.