



Please read carefully before use


Note: The clock feature of this device works in tandem with the operating system and needs to be on in order to correctly function. This does place some extra power demand on the battery so please ensure the unit is powered off while not in use.

IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS

- Read all instructions carefully before use.
- Retain manuals for future reference.
- Use this product only in the manner described.
- Only use a water-dampened soft-cloth to clean the surface of this product.
- The following will damage this product: any liquid such as water or moisture, extreme heat; cold; humidity, dusty or sandy environments.
- Only place this device on stable surfaces and ensure that any attached cables are secure and will not cause the device to fall.
- It is recommended to thoroughly charge electronic devices for the first time overnight. Subsequent charges can be as needed. During charging, or extended use, the product may become warm.
- There are no user serviceable parts in this product.
- Un-authorized attempts to dismantle or repair this product will void product warranty and may result in dangerous electric shock.
- Remove any power or data cords by pulling them from the plug and not the cord.
- Using this device near other electronic devices may cause interference.
- Do not use this product in electrical storms.

PRODUCT CONNECTIONS AND USE

- 1: USB Port / Ear bud input
- 2: Previous track / Rewind / Vol -
- 3: Next track / Fast forward / Vol +
- 4: Menu
- 5: Select / Play / Pause / Power On / Power Off
- 6: Adjust volume / Clock & Volume shortcut
- 7: Screen
- 8: Reset button

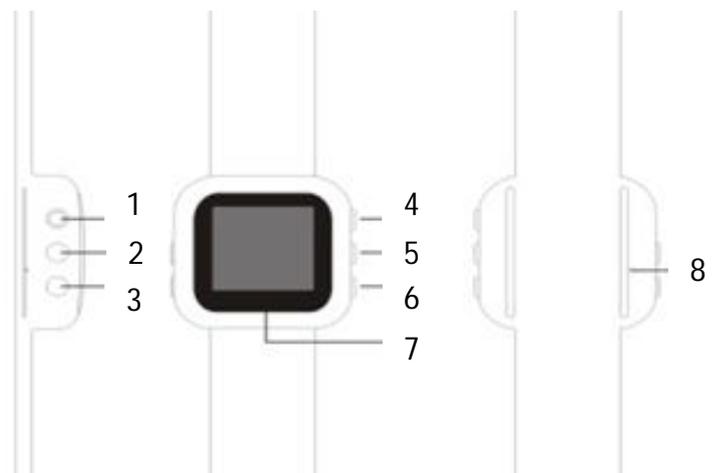

WHAT'S IN THE BOX

1 x MP4-S5, 1 x USB charging / file transfer cable, 1 x pair of ear buds, 1 x Video conversion software CD, 1 x User Instruction

BASIC OPERATION

1. Power On / Power off
Press and hold the power On / Off button until the unit turns On / Off
2. Volume Key
Press to adjust the volume either up or down.
3. Charge / Connect / Disconnect from PC
Connect the MP4-S5 to your PC via the USB Cable supplied. (The USB side for your PC and the 2.5mm jack for your S5. Once connected, the S5 will appear in your Windows Explorer feature as a removable drive. Use your PC's standard "safely remove hardware" procedure to remove the drive

MAIN MENU SETTINGS

Press and hold the Menu button until the Menu screen appears.

The options to then choose from are:

Music, Run, History, Clock, Stopwatch, Images, System, Other.

Note 1: To return to the main Menu screen, press and hold the Menu button

Note 2: By default, your S5 will continue playback of the last previous paused / stopped feature.

Note 3: If the automatic screen saver mode engages (and the screen goes black) you may need to press your button once to awaken the device, then a second time to confirm your selection.

Note 4: Select any file for playback using the "next" and "previous" buttons for navigation then the "play" button to confirm your choice.

MUSIC PLAYBACK

Select Music from the menu screen. This is called the Audio main screen.

1. Pause a song:
Press the Play / Pause button. The screen will either display a pause or play logo to show what status it is in
2. Next / previous track: Press the Next / Previous track button
3. Rewind / Fast forward: Press and hold either the Rewind or Fast forward button. The related screen icon will be illuminated when selected.
4. Repeat or shuffle songs: Select "Next Set" from the Music menu screen during audio playback. This is called the Audio settings screen.
 - 4.1. Repeat all songs in the current track playback folder: Repeatedly press the Menu button until this icon the circular arrow icon appears  is highlighted. All tracks in the current playback folder will then be played back only.
 - 4.2. Repeat the current song only: Repeatedly press the Menu button until this icon the circular arrow icon appears with the number 1 next to it . The current track will be played back only
 - 4.3. Shuffle songs randomly: Repeatedly press the Menu button until the shuffle icon is highlighted . All tracks will then be played back randomly

Music file management

From the Audio main screen, press the Menu button, then select from the following options:

1. Local folder: Show and explore files and folders
2. Delete File: Delete the currently played tracks
3. Delete all: Delete all tracks from your S5 (WARNING: Deleted files are permanently deleted)

RUN (PEDOMETER)

1. Select "Run" from the main Menu screen.
2. Enter your Weight, Step (Length) and Daily goal using the "next" and "previous" buttons, then the "play" button to confirm.

Note: A reminder will be given once your "Daily Goal" has been reached.

3. Once your details have been entered, selected Pedometer from the menu.
4. Press the "Play" button to begin. A silhouette of a running person will appear when this feature is activated. The total steps taken will be displayed in the black band in the middle of the screen.

Note: Use the "previous" / "next" buttons to toggle between total Kilometers, Calories or Time consumed / elapsed.

5. When you have finished your session, you have the option to be able to save your data (and to add to it at a later time) Use the "next" and "previous" to make your selection and the play button to confirm your choice.

HISTORY MODE

Select "History" from the main Menu screen. You are then able to select from the following: Max score, History and Inquiry.

1. Max score: Show details of the highest score such as distance, steps, time and calories
2. History: Shows a record of all saved data files sorted by date.
3. Inquiry: Use this option to search by date for a data file

Note: Use the "next" and "previous" buttons for navigation then the "play" button to confirm your choice.

CLOCK MODE

Select "Clock" from the main Menu screen to show the display the clock

STOP WATCH MODE

Select "Stopwatch" from the main Menu screen.

1. Use the "next" and "previous" button to toggle between "start" and "reset" and use the play button to confirm your choice.
2. Once the stop button has been selected, it can be restarted by pressing the "play" button again without losing the current data.
3. Use the "next" and "previous" buttons to record multiple lap times. Display lap information and stop timing by pressing the Menu button. Use the "next" and "previous" buttons to review down your lap time list.
4. Exit this feature to reset the timer and delete the saved data.

IMAGE MODE

Select "Images" from the main Menu screen.

Use the "next" and "previous" buttons for navigation while in thumbnail view, then the "play" button to confirm your choice and to view the image. While an image is on screen, use the "next" and "previous" buttons to skip between images.

SYSTEM

Select "System" from the main Menu screen. You are then able to select from the following options:

Note: Use the "next" and "previous" buttons for navigation then the "play" button to confirm your choice.

About

Display memory information such as total stored songs photos and memory capacity, available memory, firmware revision and model number.

Music

Select between:

1. Repeat options: (Normal, repeat one, repeat all or random)
2. Equaliser: Natural, rock, Pop, Classic, Soft, Jazz, WOW and 3D sound.
3. Volume limit: Select a volume sound limit between a 0 and 30 scale

General

Adjust settings including:

1. Date and Time: Including date, time and time zone
2. Settings: Off time: (Select between 0 and 60 minutes) Sleep time (Select between 0 and 120 minutes)
3. Black: Adjust between 0 and 30 seconds to automatically engage the screen saver (and turn the screen to off/black)
4. Brightness: Adjust between 0 and 10
5. Language

Photos

Select between:

1. Manual play: User has to manually select to next image

2. Auto play: Choose between 0 and 10 seconds delay for each image to be viewed as a slide show.

Reset settings

Use this to option to reset all user settings back to factory defaults (this does not affect saved files)

OTHERS – MOVIE

Select "Others" from the main Menu screen. Then select Movie.

From the Movie main screen, press the Menu button, then select from the following options:

1. Local folder: Show and explore files and folders
2. Delete File: Delete the currently played movie
3. Delete all: Delete all movies from your S5 (WARNING: Deleted files are permanently deleted)

OTHERS – TEXT

Select "Others" from the main Menu screen. Then select Text.

From the Text main screen, press the Menu button, then select from the following options: Local folder, Play set, Delete file and Delete all.

1. Local folder: Show and explore files and folders
2. Play set: Manual play (User has to manually turn each page of the text document) select to next image. Auto play (Choose between 0 and 10 seconds delay for each page to be displayed then turned automatically)
3. Delete File: Delete the currently played text document
4. Delete all: Delete all text documents from your S5 (WARNING: Deleted files are permanently deleted)

VIDEO CONVERSION TOOL

Your MP4-S5 supports AVI (128x128 pixel) video format files. Use the supplied Video Conversion Tool before loaded movies onto this device.

Note: If an AVI file has not been converted to 128 x 128 pixels, it will take up to one minute to load before playback can begin.

SPECIFICATIONS

- 1.5-inch TFT screen display
- Measure: Steps, calculate distance and calories, save data to history list, show best score and target steps
- Includes watch display, lap timer and countdown timer
- 128 x 128 pixels display resolution
- Plays AVI video format file
- Plays MP3, WMA, WAV music format files
- Picture browsing of JPEG format
- Support TXT E-book format
- Integrated 400mAh Li-ion rechargeable Battery
- Multi-language support

TROUBLE SHOOTING / Q & A

I have loaded my AVI files but when I try and play them back the screen goes black	The AVI must be resized/converted to play on your S5 player as the screen size is far smaller than your average TV. Please use the software tools supplied to resize your files to ensure smooth playback. Playback is still possible with unconverted files, but it will take up to one minute before the player can start playback.
No power	Check battery has been fully charged
Even after a full charge, my battery doesn't last very long	If your S5 is not in use it is best to turn it fully off. As per its design, it needs to always be on in order for the clock feature to work correctly.
Unable to locate or play files	Check that the file is in a compatible format
	Check to see if the file is stored in the correct directory
There is no sound from the ear buds	Check the volume level
	Check the connection (earphone to the earphone jack)
	Check if your music files and ear buds are compatible with another MP3 player
Not charging	Check to make sure that your MP4-S5 is connected to a USB port on your computer. Check that the USB port is working for other devices.
Unable to store music	Check if you have enough space on your MP4-S5 to store the music file
	Check to make sure that the USB cable is connected to the PC and to the MP4-S5 securely and correctly
Computer does not recognise my MP4-S5	Check that the USB cable is properly connected to your computer
	Try plugging the USB cable into a different USB Port. The ports at the rear are often the best, rather than a USB hub, as they connect direct to the mother board

For further product information and instruction please visit our product web page at www.laserco.net or email support@laserco.com.au

Please note: As continual improvements are made to this product, slight operational differences may occur. For the most up-to-date user manual, please visit our web site.

Warranty Against Defects

Laser Corporation Pty Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Through a network of retailers and resellers, Laser will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage.

Please retain your receipt as proof of purchase

How to make a product warranty claim:

Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture, the condition of the Laser Product and the type of defect.

Step 2a): Contact your place of purchase. They will assess the nature of the fault and refund or replace the product as per their store refund or warranty policy.

Step 2b): If your place of purchase cannot be contacted, then you can contact Laser . Customer Service with details of your defective Laser Product: Phone: (02) 9870 3355; or Email: service@laserco.com.au or online www.laserco.net/support/warranty (click on "Consumers (End Users)"). Our business address is at 1/6-8 Byfield Street, North Ryde, NSW 2113

Step 3: Laser . will issue you with a Return Authorisation (RA) number within 48 hours. When requested, send us the defective Product and a copy of your receipt. Laser will cover the cost of the return delivery.

Step 4: Wait for us to contact you. Once we have received your defective Laser Product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser Product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser Product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



NAVIG [8] R

PRECISION
gaming accessories

CONNECT

naum8
GPS ESSENTIALSiRange!
By LASER