



**Please Read Carefully Before Use**

## Table of Contents


Important safety instructions and precautions .....	2
Product Connections and Use.....	3
What's in the Box.....	3
Installing The Battery.....	3
Basic Operation.....	3
Navigating the Main Menu .....	4
Music mode.....	4
Voice Record .....	4
Voice Record Playback.....	5
FM Radio.....	5
System Setting .....	5
Trouble Shooting / Q & A.....	5
System Requirements.....	6
Warranty Against Defects .....	7

## IMPORTANT SAFETY INSTRUCTIONS AND PRECAUTIONS

- Read all instructions carefully before use.
- Retain manuals for future reference.
- Use this product only in the manner described.
- Only use a water-dampened soft-cloth to clean the surface of this product.
- Only recommended batteries and accessories should be used with this product.
- The following will damage this product: any liquid such as water or moisture, extreme heat; cold; humidity, dusty or sandy environments.
- If this product has re-moveable batteries or a power cord, remove or disconnect them before long periods of in-active use. Removing the batteries prevents damage due to leakage. Always insert batteries according to the + and - signs and replace both batteries with the same type at the same time.
- There are no user serviceable parts in this product.
- Un-authorized attempts to dismantle or repair this product will void product warranty and may result in dangerous electric shock.
- Do not use this product if you are in control of dangerous machinery such as a motor vehicle.
- Remove any power or data cords by pulling them from the plug and not the cord.

## PRODUCT CONNECTIONS AND USE

1. USB cover	4. Next / Forward / Vol +
2. Last / Previous / Vol -	5. Confirm / Play / Pause / Power On / Power Off
3. Menu button	6. Record button

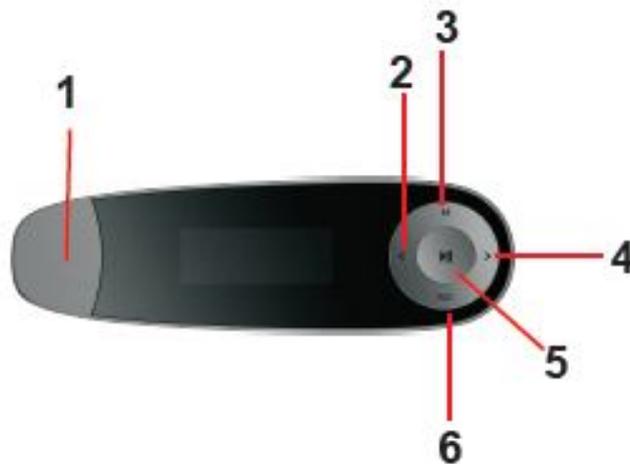

## WHAT'S IN THE BOX

1 x MP3-L32 player, 1 x USB cable (charging and data transfer), 1 x Ear buds, 1 x User manual

## INSTALLING THE BATTERY

Open the battery cover at the rear of the player, by sliding it towards the outer side. Insert one Alkaline AAA size battery (not included) into the battery compartment. Re-place the battery cover.

## BASIC OPERATION

- Power On** Press and hold the PLAY/PAUSE button until "LOADING" appears on the screen.
- Power Off** Press and hold the PLAY/PAUSE button until "BYE BYE" appears on the screen.
- Volume Up** Press the "+" button momentarily
- Volume Down** Press the "-" button momentarily
- PC Connection** Simply remove the USB cap and insert into any USB port. The device can then be used as a removable flash drive to drag and drop compatible music files

## NAVIGATING THE MAIN MENU

Enter the main menu by pressing and holding the MENU button. The subsequent options are: MSC (Music), REC (Record), RPL (Replay recorded file), FM (FM Radio), SYS (System setting)

The following can be used for navigation:

<b>Play button</b>	Previous screen
<b>Next / Previous button</b>	Navigate through options
<b>Menu button</b>	Press to confirm

## MUSIC MODE

Select MSC from the main menu. Use the previous and next buttons to select a track then press the PLAY button.

**While the music is paused**, you can press the MENU button to access sub-menu options. These are:

Menu	Indicate the folder of present playing file
Delete file	Delete the present playing song
Delete All	Delete All songs
Exit	Return to previous screen

**While the music is playing**, you can press the MENU button to access sub-menu options. These are:

Repeat	Choose how you would like to repeat the song
Equalizer	Choose Rock, Classic, Soft, or Natural sound settings
Replay	Choose to replay your song
Replay times	Choose the replay times
Replay gap	Choose to replay song sections
Exit	Return to previous screen

## VOICE RECORD

Toggle to REC from the main menu and press the MENU button to confirm your choice.

Press the PLAY button to start recording.

Press the PLAY button again to stop recording.

Press and hold the MENU button to save the file and exit the screen.

## VOICE RECORD PLAYBACK

Toggle to RPL from the main menu and press the MENU button to confirm your choice.  
 Use the PREVIOUS and NEXT buttons to select a voice file then press the PLAY button to begin playback.  
 Press and hold the previous or next buttons to either fast forward or rewinf through a file.  
 Press the MENU button to access the sub menu options where you can view or delete voice recordings.

## FM RADIO

Toggle to FM from the main menu and press the MENU button to confirm your choice.  
 Press the PREVIOUS and NEXT buttons to manually tune in a radio station.  
 Press the MENU button to access the sub-menu options:

Save radio station	Save your favorite radio station
Record	Record live broadcast radio
Delete	Delete a previously saved station
Delete all	Delete all previously saved radio stations
Auto search	Search the radio station automatically
Normal channel	FM radio station
Exit	Return to the previous screen

## SYSTEM SETTING

Toggle to SYS from the main menu and press the MENU button to confirm your choice.  
 Use the PREVIOUS and NEXT buttons to togllle between the options and the MENU button to enter or confirm your choice. The following options are: system time, backlight, light colour, language, power off, contrast, memory info, firmware version, ear protection set, firmware upgrade (per instruction from the LASER support team only) and exit.

## TROUBLE SHOOTING / Q & A

No power	Replace with a fresh battery, or check the battery by placing it into another device.
Unable to locate or play files	Check that the file is in a MP3 format. <b>(Use the PC program supplied on your MP3 player)</b>
	Check to see if the files are stored in a different directory.



## QUICK START GUIDE

MP3-L32

I can not hear music from the earbuds	Check the volume level
	Check the earbuds connection plug is clean and not damaged
	Check if your music file is compatible (ie. MP3).
Unable to transfer files.	Check if you have enough space on your MP3-L32 to store your (new) files.
	Check to make sure that the USB cable is connected correctly to the PC and to the MP3-L32.
My computer doesn't recognize my MP3 player	Check that the USB cable is properly connected to your computer.
	Try plugging the USB cable into a different USB Port, preferably the one on the back of your computer instead of a USB hub

### SYSTEM REQUIREMENTS

Your computer system must meet the following specifications:

Pentium 200MHz or above

Microsoft Windows 2000 and above

Free USB port

For further product information and instruction please visit our product web page at [www.laserco.net](http://www.laserco.net) or email [support@laserco.com.au](mailto:support@laserco.com.au)

Please note: As continual improvements are made to this product, slight operational differences may occur. For the most up-to-date user manual, please visit our web site.

## WARRANTY AGAINST DEFECTS

Laser Corporation Pty Ltd ("Laser") warrants your new product to be free from defects in materials and workmanship for 12 months, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. The benefit of this warranty is in addition to your rights under the Australian Consumer Law and to other rights and remedies of the consumer under a law in relation to the goods or services to which the warranty relates.

Through a network of retailers and resellers, Laser will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, normal wear and tear, neglect or improper storage.

Please retain your receipt as proof of purchase

### How to make a product warranty claim:

Step 1: Find your receipt which proves the date of purchase. Where the date of purchase cannot be verified, your place of purchase or Laser will make an assessment based on the date of manufacture, the condition of the Laser Product and the type of defect.

Step 2a): Contact your place of purchase. They will assess the nature of the fault and refund or replace the product as per their store refund or warranty policy.

Step 2b): If your place of purchase cannot be contacted, then you can contact Laser . Customer Service with details of your defective Laser Product: Phone: (02) 9870 3355; or Email: [service@laserco.com.au](mailto:service@laserco.com.au) or online [www.laserco.net/support/warranty](http://www.laserco.net/support/warranty) (click on "Consumers (End Users)"). Our business address is at 1/6-8 Byfield Street, North Ryde, NSW 2113

Step 3: Laser . will issue you with a Return Authorisation (RA) number within 48 hours. When requested, send us the defective Product and a copy of your receipt. Laser will cover the cost of the return delivery.

Step 4: Wait for us to contact you. Once we have received your defective Laser Product for inspection, we will inform you of our assessment of your claim within 7 days. When we contact you, we will firstly let you know whether you have a valid claim under this Warranty, and if so, we will inform you whether your defective Laser Product will be replaced or repaired, together with the number of days you can expect to wait to receive your replaced or repaired Laser Product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



NAVIG[8]R

PRECISION  
gaming accessories

CONNECT

naum8  
GPS ESSENTIALS

